


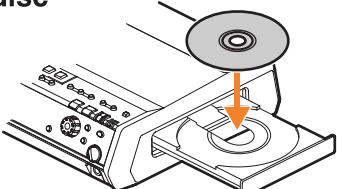 




STEP

2 Let's Create a CD

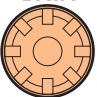

Media to Prepare  **Blank CD-R disc**



1 Press  . 
 "Insert Disc" appears on the display and the disc tray on the right side opens.

2 **Place the CD-R disc on the disc tray.**
 Place the CD-R with the label side facing upward. 



3 Press  . 
 The disc tray closes. When the CD-2 recognizes the CD-R disc, the screen shown above appears.


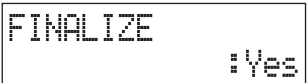
4 **Select the song that you wish to write to the CD-R disc.**


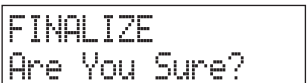
1 Turn  to select the desired song. 



2 Press  . 
 CD track number increases (CD01 → CD02)



* To select additional songs, repeat Step 4.


5 Press  . 
 "CD WRITE Are You Sure?" is displayed.

6 Press  . 
 The FINALIZE screen appears.



7 Press  . 
 "FINALIZE Are You Sure?" is displayed.



8 Press  . 
 The CD-2 begins writing a CD. The disc will be ejected automatically when CD writing is completed.

9 Press  when the disc is ejected.
 "Write Completed Another Disc?" is displayed. Press  to complete the writing process.

Now you have a CD of your performance!! 

Let's listen to your CD

1 Press  .
 The disc tray closes. When the CD-2 recognizes the CD-R disc as an audio CD, the following screen is displayed:

 "CD" appears on the left side of the screen.

2 Press   on the CD-R/RW Drive side to start and stop CD playback.

➔ For detailed instructions on writing CDs, see Pages 46-48 of the CD-2 Owner's Manual.