


Important Notice

Caution Regarding the Touch Sensor

The BR-800's top panel uses a touch sensor. To prevent the touch sensor from malfunctioning, please observe the following precautions.

- **During the time from when you turn on the power until the Play screen appears, do not touch the top panel with your fingers and do not allow any cables or metal objects (such as coins) to come into contact with it.**

Play screen

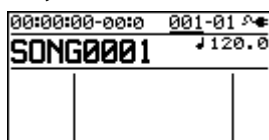

- **While using the BR-800, keep all cables and metal objects (such as coins) away from the top panel, so they don't come into contact with it.**

Copyright © 2010 BOSS CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of BOSS CORPORATION.


重要なお知らせ

タッチ・センサーについての注意事項

BR-800のトップ・パネルにはタッチ・センサーが使われています。タッチ・センサーの誤動作を防ぐため、以下の点にご注意ください。

- **電源をオンにしてからプレイ画面が表示されるまでの間は、トップ・パネルに手が触れたりケーブルや金属類（コインなど）が触れたりすることがないようにしてください。**

プレイ画面

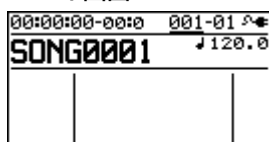

- **BR-800 使用時には、ケーブルや金属類（コインなど）がトップ・パネルに触れないようにしてください。**

© 2010 ボス株式会社

本書の一部、もしくは全部を無断で複写・転載することを禁じます。

